



HALLIS HUDSON GROUP LTD
Committed to excellence

Woodline

FITTING INSTRUCTIONS

Step One

The brackets should be placed just above the top of the window, inline with each other and between 3 and 6 inches out from the window's edge; making sure both brackets are the same distance from the edge of the window and parallel with top (you may require a spirit level for added accuracy)

Step Two

Mark (on the wall) where the brackets of the pole will go. To do this remove the backplate from the bracket. Use a pencil to mark the exact position of the screw holes that will fix the brackets to the wall.

Step Three

Make a small indentation in the wall in the place where you are going to drill. This will help keep the drill bit in place when you start the hole.

Step Four


Check there are no electrical cables or pipes where you will be drilling into the wall. Then, wearing safety goggles, drill into the wall at the marked positions using a masonry drill bit and start drilling slowly. Insert rawl plugs, ensuring they are flush with the wall. Screw the bracket backplate into place using the three screws provided. Then screw the bracket onto the backplate turning clockwise.

Step Five

Adjust the size of the curtain pole or cut to size using a hacksaw. Remember to allow enough pole for the curtains to stack neatly either side of the window without blocking out the light.

Step Six

Put the pole in position on the brackets. There should be one curtain ring between the bracket and the finial at each end. Put the finials on the ends of the pole.
If you are joining two poles together – use a joining screw and the third centre bracket provided.

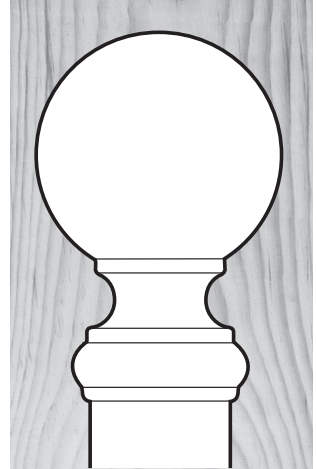

Unit B1, Red Scar Business Park, Preston, Lancashire PR2 5NJ.

Sales Tel: 01772 202 202 | Sales Fax: 01772 515 515

e-mail: sales@hallishudson.com | www.hallishudson.com | Registered No. 1290285